


Steps to Update Firmware on NVR using NVR Update Tool.

1. Connect the NVR directly to the PC using a LAN cable
2. Assign Static ip on the LAN card of the PC in the range of NVR's ip
3. Kindly check if you can access the NVR Web GUI on any browser
4. Launch the NVR update tool

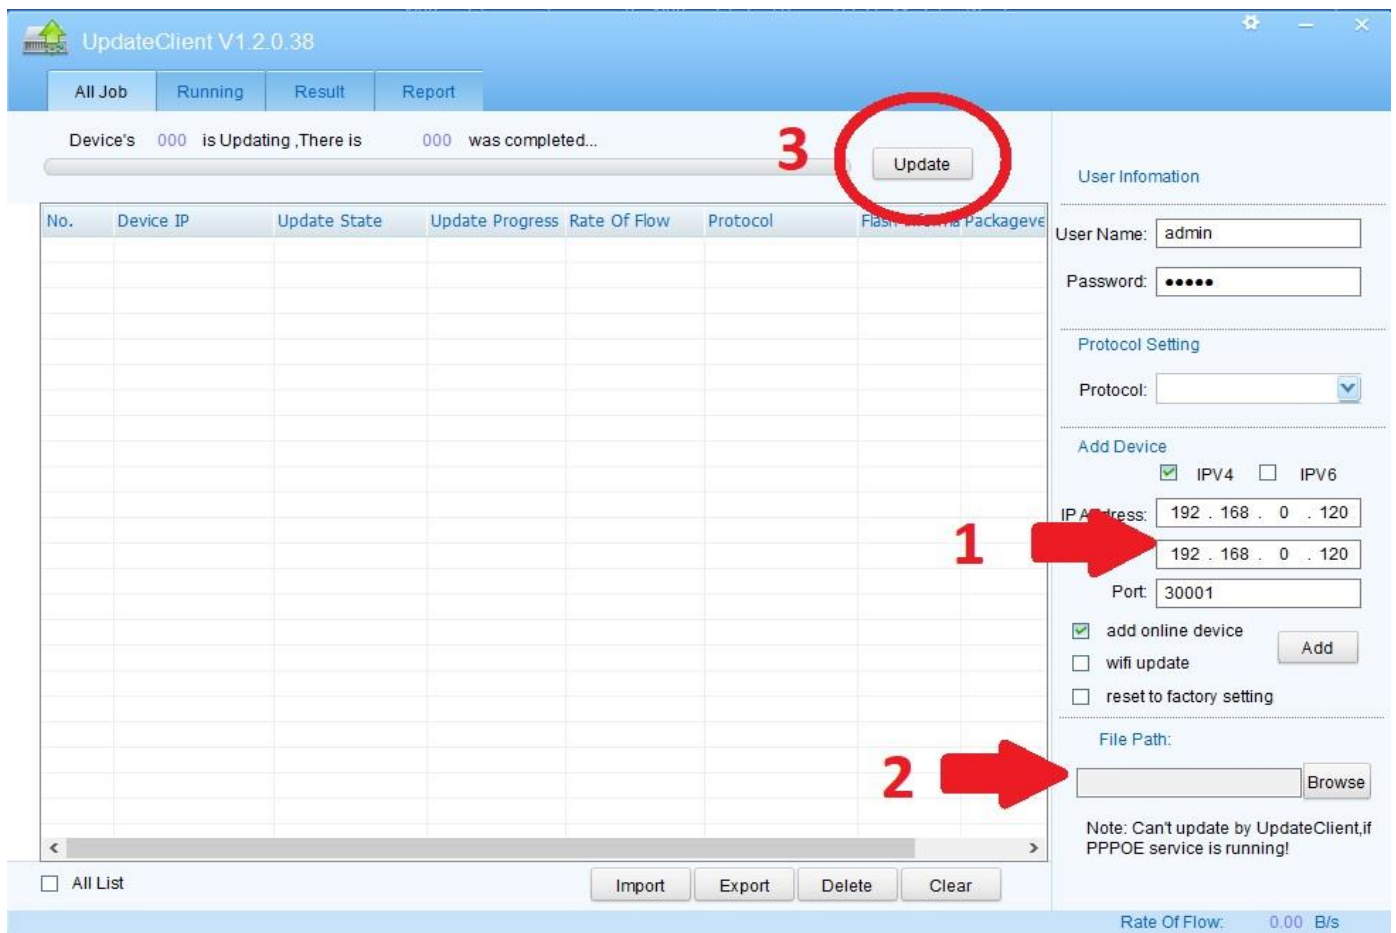

In the image you can see the options which are numbered 1, 2 & 3. Those are steps.

Step 1: Enter the ip address of the NVR and click on ADD. And it will display the ip address on left and will show the status whether it is connected or not.

No.	Device IP	Update State	Update Progress	Rate Of Flow	Protocol	Flash informa Packageve
1	172.27.49.158	connect success	0%	0.00 KB/s		313 MB v3.3.0803

Step 2: Click on Browse and select the downloaded firmware file for the NVR

Step 3: Click on Update to update the firmware.

It will take around 5 to 10 minutes for the firmware upgrade to complete.